
# ML500 200

# ML500 Twin Arm Datasheet

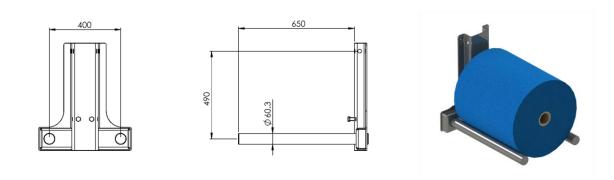

### **INTENDED USE:**

The intended use of this tool is for the stable lifting of loads placed between the arms. The max load is 500kg @ 650mm load centre

### **WARNINGS:**

### DO NOT MODIFY

Always keep hands and limbs and all parts of body away from the load when lifting

